



Technical Service Bulletin

Technical Service Bulletin: TSB101093

Released Date: 06-Jan-2011

New Water Pump O-ring Adapter

New Water Pump O-ring Adapter

Warranty Statement


The information in this document has no effect on present warranty coverage or repair practices, nor does it authorize TRP or Campaign actions.

Contents

This document announces the release of a new o-ring adapter for QSK38/50/60 MCRS water pumps. The new o-ring adapter obsoletes the previous part number. A dimensional change was made in the o-ring groove to improve the sealing properties of the joint at low temperatures.

This change was made to all dual impellor water pumps fitted to QSK38/50/60 MCRS engines, water pump options WP 6704, WP 6705, WP 6707, WP 6708, WP 6713, WP 6714, and WP 6718. The ESN first for this change was 33183776, built on November 8, 2010.

Previous O-ring Adapter Part Number	New O-ring Adapter Part Number
4951852	3644172

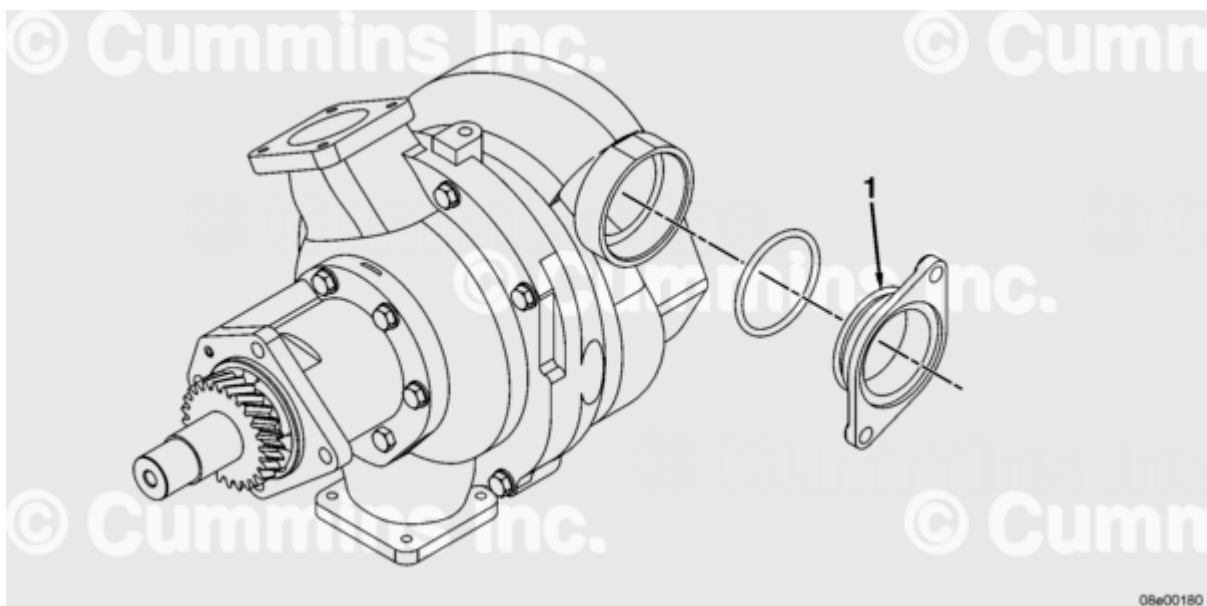

New O-ring Adapter, Part Number 3644172

Number 1 points to the new adapter.

Document History

Date	Details
2010-11-10	Module Created

Last Modified: 06-Jan-2011
